


การตั้งค่า DHCP และการจัดการ IP Address

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด Enter



2. ใส่ Username : **admin** และ Password : **aisadmin** แล้วกด Login

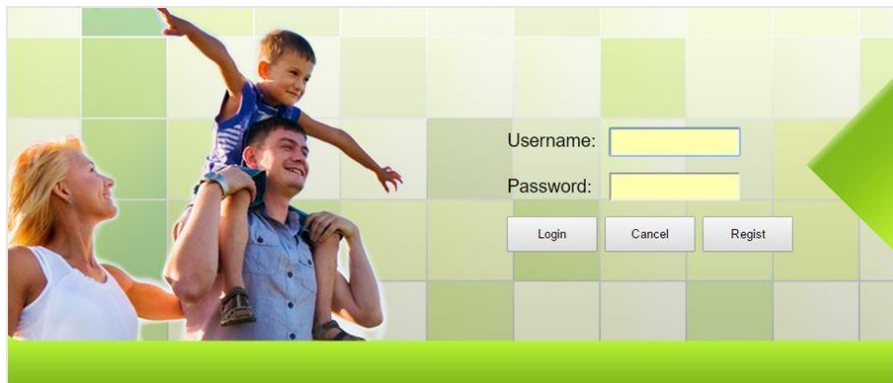

3. หลังจาก Login แล้ว จะเข้าสู่หน้า Home

Logout

	State	Network	Security	Application	Management																						
Device Information	State » Device Information » Device Information																										
Device Information	On this page, you can query device information.																										
Wireless State																											
Wan State																											
Lan State																											
Optical Power																											
	<table border="1"> <thead> <tr> <th colspan="2">Device Information</th> </tr> </thead> <tbody> <tr> <td>Software Version</td> <td>RP2570</td> </tr> <tr> <td>Hardware Version</td> <td>WKE2.134.285D2G</td> </tr> <tr> <td>Device Model</td> <td>AN5506-04-D2G</td> </tr> <tr> <td>Device Description</td> <td>GPON</td> </tr> <tr> <td>ONU State</td> <td>O1(STATE_INIT)</td> </tr> <tr> <td>ONU Regist State</td> <td>INIT</td> </tr> <tr> <td>LOID</td> <td>fiberhome</td> </tr> <tr> <td>CPU Usage</td> <td>4%</td> </tr> <tr> <td>Memory Usage</td> <td>56%</td> </tr> <tr> <td>Web Server port</td> <td>80</td> </tr> </tbody> </table>					Device Information		Software Version	RP2570	Hardware Version	WKE2.134.285D2G	Device Model	AN5506-04-D2G	Device Description	GPON	ONU State	O1(STATE_INIT)	ONU Regist State	INIT	LOID	fiberhome	CPU Usage	4%	Memory Usage	56%	Web Server port	80
Device Information																											
Software Version	RP2570																										
Hardware Version	WKE2.134.285D2G																										
Device Model	AN5506-04-D2G																										
Device Description	GPON																										
ONU State	O1(STATE_INIT)																										
ONU Regist State	INIT																										
LOID	fiberhome																										
CPU Usage	4%																										
Memory Usage	56%																										
Web Server port	80																										

4. เลือก **Network** -> **DHCP Server** -> **DHCP Service**
5. ในช่อง **IP Address** สามารถเปลี่ยนแปลงหมายเลข IP ได้ตามต้องการ
6. สามารถกำหนดช่วงของ IP ที่ใช้ในการแจกจ่ายได้
7. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

Logout

State	Network	Security	Application	Management
Wlan Settings	Network » DHCP Server » DHCP Service			
LAN Settings	You may enable/disable DHCP functions and configure the parameters as your wish, and become effective after reboot.			
BroadBand Settings	DHCP Service			
DHCP Server	Type Server ▼ DHCP Start IP 192.168.1.100 DHCP End IP 192.168.1.200 DHCP Subnet Mask 255.255.255.0 DHCP Primary DNS 192.168.1.1 DHCP Secondary DNS DHCP Default Gateway 192.168.1.1 DHCP Lease Time 24 Hour 0 Min (1 min - 99 hours) Option60 Disable ▼ Apply Cancel			
DHCP Service				
Remote Management				
Authentication				
IPv6				