


การตั้งค่า Port Forwarding หรือ Virtual Servers

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด Enter



2. ใส่ Username : **admin** และ Password : **aisadmin** แล้วกด Login

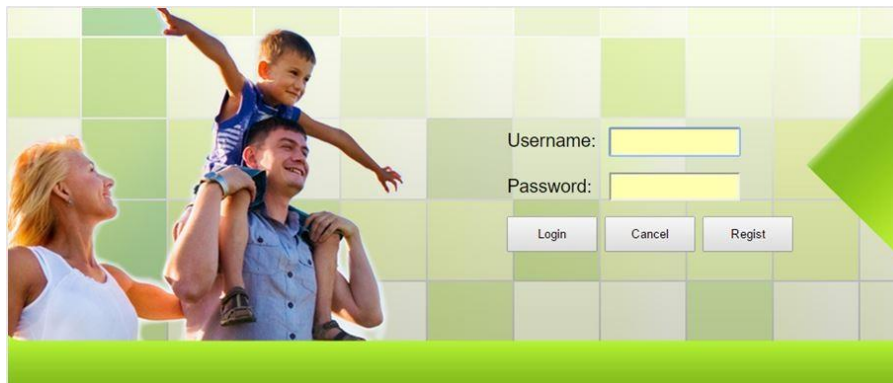

3. หลังจาก Login แล้ว จะเข้าสู่หน้า Home

Logout

State	Network	Security	Application	Management																				
Device Information Device Information Wireless State Wan State Lan State Optical Power	State » Device Information » Device Information On this page, you can query device information. Device Information <table border="1"> <tbody> <tr> <td>Software Version</td> <td>RP2570</td> </tr> <tr> <td>Hardware Version</td> <td>WKE2.134.285D2G</td> </tr> <tr> <td>Device Model</td> <td>AN5506-04-D2G</td> </tr> <tr> <td>Device Description</td> <td>GPON</td> </tr> <tr> <td>ONU State</td> <td>O1(STATE_INIT)</td> </tr> <tr> <td>ONU Regist State</td> <td>INIT</td> </tr> <tr> <td>LOID</td> <td>fiberhome</td> </tr> <tr> <td>CPU Usage</td> <td>4%</td> </tr> <tr> <td>Memory Usage</td> <td>56%</td> </tr> <tr> <td>Web Server port</td> <td>80</td> </tr> </tbody> </table>				Software Version	RP2570	Hardware Version	WKE2.134.285D2G	Device Model	AN5506-04-D2G	Device Description	GPON	ONU State	O1(STATE_INIT)	ONU Regist State	INIT	LOID	fiberhome	CPU Usage	4%	Memory Usage	56%	Web Server port	80
Software Version	RP2570																							
Hardware Version	WKE2.134.285D2G																							
Device Model	AN5506-04-D2G																							
Device Description	GPON																							
ONU State	O1(STATE_INIT)																							
ONU Regist State	INIT																							
LOID	fiberhome																							
CPU Usage	4%																							
Memory Usage	56%																							
Web Server port	80																							

4. เลือก **Application -> Port Mapping**
5. กด **Add** เพื่อสร้างรายการใหม่

Logout

State
Network
Security
Application
Management

VPN

DDNS

Port Mapping

Port Mapping

Port Triggering

NAT

UPNP

DMZ

Diagnosis

Application » Port Mapping » Port Mapping

On this page, you could configure port mapping.

Add
Delete
Delete All

Port Mapping Rules List									
ID	WAN	Description	Protocol	Public IP	Public Port	Private IP	Private Port	Enable	
--	--	--	--	--	--	--	--	--	

6. เติมข้อมูลในช่องว่าง ดังด้านล่าง
 - WAN : WAN Interface ที่ต้องการใช้งาน
 - Description : ชื่อตามต้องการ
 - Public Port : Port ที่จะเข้าจากภายนอก
 - Private IP : IP ภายในที่จะใช้งาน
 - Private Port : Port ภายในที่จะใช้งาน
7. ในช่อง **Enable** ให้เลือก Enable เพื่อเปิดใช้งาน
8. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

Logout

State
Network
Security
Application
Management

VPN

DDNS

Port Mapping

Port Mapping

Port Triggering

NAT

UPNP

DMZ

Diagnosis

Application » Port Mapping » Port Mapping

On this page, you could configure port mapping.

Add
Delete
Delete All

Port Mapping Rules List									
ID	WAN	Description	Protocol	Public IP	Public Port	Private IP	Private Port	Enable	

WAN

aisfibre_ipv4_pppoe ▼

Description

(0-32 characters, including alphanumeric, '-' and '_')

Protocol

TCP ▼

Public IP

Public Port

-

* (0-65535)

Private IP

*

Private Port

* (1-65535)

Enable

Disable ▼

Apply
Cancel