

การเปลี่ยน Channel ของ Wireless

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**



2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**



3. หลังจากที่ Login แล้ว จะเข้าสู่หน้า Setup

[Logout](#)

	State	Network	Security	Application	Management																						
Device Information	State » Device Information » Device Information																										
Device Information	On this page, you can query device information.																										
Wireless State																											
Wan State																											
Lan State																											
Optical Power																											
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2">Device Information</th> </tr> </thead> <tbody> <tr> <td>Software Version</td> <td>RP2570</td> </tr> <tr> <td>Hardware Version</td> <td>WKE2.134.285D2G</td> </tr> <tr> <td>Device Model</td> <td>AN5506-04-D2G</td> </tr> <tr> <td>Device Description</td> <td>GPON</td> </tr> <tr> <td>ONU State</td> <td>O1(STATE_INIT)</td> </tr> <tr> <td>ONU Regist State</td> <td>INIT</td> </tr> <tr> <td>LOID</td> <td>fiberhome</td> </tr> <tr> <td>CPU Usage</td> <td>4%</td> </tr> <tr> <td>Memory Usage</td> <td>56%</td> </tr> <tr> <td>Web Server port</td> <td>80</td> </tr> </tbody> </table>					Device Information		Software Version	RP2570	Hardware Version	WKE2.134.285D2G	Device Model	AN5506-04-D2G	Device Description	GPON	ONU State	O1(STATE_INIT)	ONU Regist State	INIT	LOID	fiberhome	CPU Usage	4%	Memory Usage	56%	Web Server port	80
Device Information																											
Software Version	RP2570																										
Hardware Version	WKE2.134.285D2G																										
Device Model	AN5506-04-D2G																										
Device Description	GPON																										
ONU State	O1(STATE_INIT)																										
ONU Regist State	INIT																										
LOID	fiberhome																										
CPU Usage	4%																										
Memory Usage	56%																										
Web Server port	80																										

4. จากแถบเมนูด้านบน เลือก **Network**
5. จากแถบเมนูย่อยด้านซ้าย เลือก **Wlan Settings -> Basic**
6. ที่ช่อง **Channel** เลือกเปลี่ยน Channel ได้ตามต้องการ
7. กด **Apply** เพื่อยืนยันการเปลี่ยนแปลง

Logout

StateNetworkSecurityApplicationManagement

Wlan Settings

Basic

Advanced

WIFI Control

LAN Settings

BroadBand Settings

DHCP Server

Remote Management

Authentication

IPv6

Network » Wlan Settings » Basic

You could configure the minimum number of Wireless settings for communication, such as Channel. The Access Point can be set simply with only the minimum setting items.

Wireless Network

Radio On/Off

RADIO ON

Network Mode

802.11 b/g/n

Domain

THAILAND

Frequency Bandwidth

20MHZ

Frequency (Channel)

channel 9

Apply

Cancel