

การตั้งค่า Dynamic Domain Name Server (DDNS)

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**



2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**



3. หลังจากที่ได้ Login แล้ว จะเข้าสู่หน้า Setup

Logout

	State	Network	Security	Application	Management																						
Device Information	State » Device Information » Device Information																										
Device Information	On this page, you can query device information.																										
Wireless State																											
Wan State																											
Lan State																											
Optical Power																											
	<table border="1"> <thead> <tr> <th colspan="2">Device Information</th> </tr> </thead> <tbody> <tr> <td>Software Version</td> <td>RP2570</td> </tr> <tr> <td>Hardware Version</td> <td>WKE2.134.285D2G</td> </tr> <tr> <td>Device Model</td> <td>AN5506-04-D2G</td> </tr> <tr> <td>Device Description</td> <td>GPON</td> </tr> <tr> <td>ONU State</td> <td>O1(STATE_INIT)</td> </tr> <tr> <td>ONU Regist State</td> <td>INIT</td> </tr> <tr> <td>LOID</td> <td>fiberhome</td> </tr> <tr> <td>CPU Usage</td> <td>4%</td> </tr> <tr> <td>Memory Usage</td> <td>56%</td> </tr> <tr> <td>Web Server port</td> <td>80</td> </tr> </tbody> </table>					Device Information		Software Version	RP2570	Hardware Version	WKE2.134.285D2G	Device Model	AN5506-04-D2G	Device Description	GPON	ONU State	O1(STATE_INIT)	ONU Regist State	INIT	LOID	fiberhome	CPU Usage	4%	Memory Usage	56%	Web Server port	80
Device Information																											
Software Version	RP2570																										
Hardware Version	WKE2.134.285D2G																										
Device Model	AN5506-04-D2G																										
Device Description	GPON																										
ONU State	O1(STATE_INIT)																										
ONU Regist State	INIT																										
LOID	fiberhome																										
CPU Usage	4%																										
Memory Usage	56%																										
Web Server port	80																										

4. จากแถบเมนูด้านบน เลือก **Application**
5. จากแถบเมนูด้านซ้าย เลือก **DDNS**
6. ใส่ข้อมูลให้ครบถ้วน
 - Username: ชื่อผู้ใช้ที่สมัครไว้ในเว็บผู้ให้บริการ DDNS
 - Password: รหัสผ่านที่ผู้ใช้สมัครไว้ในเว็บผู้ให้บริการ DDNS
 - Host: ใส่ Host Name ที่สร้างไว้ในเว็บของผู้ให้บริการ DDNS
 - WAN Interface: เลือก WAN ของ Internet
 - DDNS Provider: เลือกผู้ให้บริการ DDNS ที่สมัครไว้
7. จากนั้นกด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

[Logout](#)

State	Network	Security	Application	Management																		
VPN	Application » DDNS » DDNS Settings																					
DDNS	You could configure DDNS here. DDNS <table style="width: 100%;"><tr><td style="width: 30%;">Username</td><td style="width: 30%;"> </td><td style="width: 40%;">*(1-32 Characters)</td></tr><tr><td>Password</td><td> </td><td>*(1-32 Characters)</td></tr><tr><td>Host</td><td> </td><td>*(eg. abc.dyndns.co.za)</td></tr><tr><td>WAN Interface</td><td> aisfibre_ipv4_pppoe </td><td></td></tr><tr><td>DDNS Provider</td><td> www.3322.org </td><td></td></tr><tr><td colspan="3" style="text-align: right;"> Apply Cancel Remove Configuration </td></tr></table>				Username		*(1-32 Characters)	Password		*(1-32 Characters)	Host		*(eg. abc.dyndns.co.za)	WAN Interface	aisfibre_ipv4_pppoe		DDNS Provider	www.3322.org		Apply Cancel Remove Configuration		
Username						*(1-32 Characters)																
Password						*(1-32 Characters)																
Host						*(eg. abc.dyndns.co.za)																
WAN Interface					aisfibre_ipv4_pppoe																	
DDNS Provider					www.3322.org																	
Apply Cancel Remove Configuration																						
DDNS Settings																						
Port Mapping																						
Port Triggering																						
NAT																						
UPNP																						
DMZ																						
Diagnosis																						