

การตั้งค่า DHCP และการจัดการ IP Address

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**



2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**



3. หลังจากที่ Login แล้ว จะเข้าสู่หน้า Setup

Logout

	State	Network	Security	Application	Management																						
Device Information	State » Device Information » Device Information																										
Device Information	On this page, you can query device information.																										
Wireless State																											
Wan State																											
Lan State																											
Optical Power																											
	<table border="1"> <thead> <tr> <th colspan="2">Device Information</th> </tr> </thead> <tbody> <tr> <td>Software Version</td> <td>RP2570</td> </tr> <tr> <td>Hardware Version</td> <td>WKE2.134.285D2G</td> </tr> <tr> <td>Device Model</td> <td>AN5506-04-D2G</td> </tr> <tr> <td>Device Description</td> <td>GPON</td> </tr> <tr> <td>ONU State</td> <td>O1(STATE_INIT)</td> </tr> <tr> <td>ONU Regist State</td> <td>INIT</td> </tr> <tr> <td>LOID</td> <td>fiberhome</td> </tr> <tr> <td>CPU Usage</td> <td>4%</td> </tr> <tr> <td>Memory Usage</td> <td>56%</td> </tr> <tr> <td>Web Server port</td> <td>80</td> </tr> </tbody> </table>					Device Information		Software Version	RP2570	Hardware Version	WKE2.134.285D2G	Device Model	AN5506-04-D2G	Device Description	GPON	ONU State	O1(STATE_INIT)	ONU Regist State	INIT	LOID	fiberhome	CPU Usage	4%	Memory Usage	56%	Web Server port	80
Device Information																											
Software Version	RP2570																										
Hardware Version	WKE2.134.285D2G																										
Device Model	AN5506-04-D2G																										
Device Description	GPON																										
ONU State	O1(STATE_INIT)																										
ONU Regist State	INIT																										
LOID	fiberhome																										
CPU Usage	4%																										
Memory Usage	56%																										
Web Server port	80																										

4. จากแถบเมนูด้านบน เลือก **Network**
5. จากแถบเมนูด้านซ้าย เลือก **DHCP Server**
6. ในช่อง **IP Address** สามารถเปลี่ยนหมายเลข IP ได้ตามต้องการ
7. สามารถกำหนด **Range ของ IP** ในการแจกจ่ายได้ โดยต้องพิจารณาจาก Subnet Mask ด้วย
8. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

Logout

StateNetworkSecurityApplicationManagement

Wlan Settings
LAN Settings
BroadBand Settings
DHCP Server
DHCP Service
Remote Management
Authentication
IPV6

Network » DHCP Server » DHCP Service

You may enable/disable DHCP functions and configure the parameters as your wish, and become effective after reboot.

DHCP Service

TypeServer

DHCP Start IP192.168.1.100

DHCP End IP192.168.1.200

DHCP Subnet Mask255.255.255.0

DHCP Primary DNS192.168.1.1

DHCP Secondary DNS

DHCP Default Gateway192.168.1.1

DHCP Lease Time24Hour0Min (1 min - 99 hours)

Option60Disable

ApplyCancel

Range IP