

การตั้งค่า Port Forwarding หรือ Virtual Servers

1. เปิด Browser พิมพ์ 192.168.1.1 ในช่อง Address แล้วกด Enter



2. ใส่ Username: admin และ Password: aisadmin แล้วกด Login



3. หลังจากที่ Login แล้ว จะเข้าสู่หน้า Setup

Logout

	State	Network	Security	Application	Management																						
Device Information	State » Device Information » Device Information																										
Device Information	On this page, you can query device information.																										
Wireless State																											
Wan State																											
Lan State																											
Optical Power																											
	<table border="1"> <thead> <tr> <th colspan="2">Device Information</th> </tr> </thead> <tbody> <tr> <td>Software Version</td> <td>RP2570</td> </tr> <tr> <td>Hardware Version</td> <td>WKE2.134.285D2G</td> </tr> <tr> <td>Device Model</td> <td>AN5506-04-D2G</td> </tr> <tr> <td>Device Description</td> <td>GPON</td> </tr> <tr> <td>ONU State</td> <td>O1(STATE_INIT)</td> </tr> <tr> <td>ONU Regist State</td> <td>INIT</td> </tr> <tr> <td>LOID</td> <td>fiberhome</td> </tr> <tr> <td>CPU Usage</td> <td>4%</td> </tr> <tr> <td>Memory Usage</td> <td>56%</td> </tr> <tr> <td>Web Server port</td> <td>80</td> </tr> </tbody> </table>					Device Information		Software Version	RP2570	Hardware Version	WKE2.134.285D2G	Device Model	AN5506-04-D2G	Device Description	GPON	ONU State	O1(STATE_INIT)	ONU Regist State	INIT	LOID	fiberhome	CPU Usage	4%	Memory Usage	56%	Web Server port	80
Device Information																											
Software Version	RP2570																										
Hardware Version	WKE2.134.285D2G																										
Device Model	AN5506-04-D2G																										
Device Description	GPON																										
ONU State	O1(STATE_INIT)																										
ONU Regist State	INIT																										
LOID	fiberhome																										
CPU Usage	4%																										
Memory Usage	56%																										
Web Server port	80																										

4. จากแถบเมนูด้านบน เลือก **Application**
5. จากแถบเมนูย่อยด้านซ้าย เลือก **Port Mapping**
6. กดปุ่ม **Add** เพื่อเพิ่ม Port Mapping ใหม่

Logout

State
Network
Security
Application
Management

VPN

DDNS

Port Mapping

Port Mapping

Port Triggering

NAT

UPNP

DMZ

Diagnosis

Application » Port Mapping » Port Mapping

On this page, you could configure port mapping.

Add
Delete
Delete All

Port Mapping Rules List									
ID	WAN	Description	Protocol	Public IP	Public Port	Private IP	Private Port	Enable	
--	--	--	--	--	--	--	--	--	--

7. ใส่ข้อมูลในช่องว่าง
 - WAN : เลือก WAN Connection ที่ต้องการ
 - Description : ชื่อที่ต้องการใช้งาน
 - Public Port : Port ที่จะเข้ามาจากภายนอก
 - Private IP : IP ภายในที่จะใช้งาน
 - Private Port : Port ที่จะใช้งานภายใน
8. เปลี่ยน **Enable status** ให้เป็น Enable
9. กด **Apply** เพื่อบันทึกการทำงาน

Logout

State
Network
Security
Application
Management

VPN

DDNS

Port Mapping

Port Mapping

Port Triggering

NAT

UPNP

DMZ

Diagnosis

Application » Port Mapping » Port Mapping

On this page, you could configure port mapping.

Add
Delete
Delete All

Port Mapping Rules List									
ID	WAN	Description	Protocol	Public IP	Public Port	Private IP	Private Port	Enable	

WAN
aisfibre_ipv4_pppoe ▼

Description
 (0-32 characters, including alphanumeric, '-' and '_')

Protocol
TCP ▼

Public IP

Public Port
 - * (0-65535)

Private IP
 *

Private Port
 * (1-65535)

Enable
Disable ▼

Apply
Cancel