


การตั้งค่า Port Forwarding หรือ Virtual Servers

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**



2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**

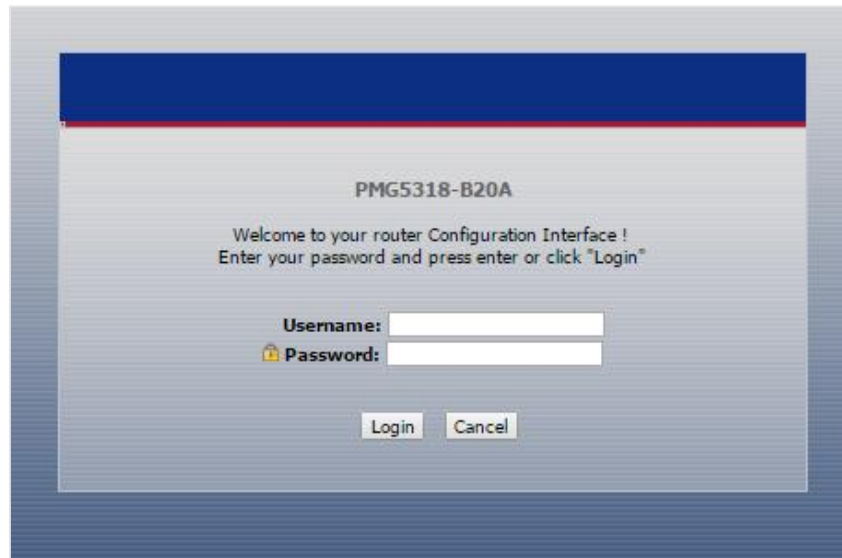

3. จะเข้าสู่หน้า Setup ซึ่งบอกค่า Status ต่างๆ



ZyXEL

Status

Refresh Interval: None Apply

Device Information

Host Name	PMG5318-B20A
Model Number	PMG5318-B20A
Firmware Version	V100A170817
Serial Number	5140135045940
GPON Serial Number	5A59504533045940

WAN Status

Mode: PPPoE

IP Address	
IP Subnet Mask	
Default Gateway	
First DNS Server	
Second DNS Server	
Third DNS Server	
IPv6 Global Address	:::/64
IPv6 Link local Address	:::/64
IPv6 First DNS Server	:::
IPv6 Second DNS Server	:::
IPv6 Third DNS Server	:::

LAN Information

IP Address	192.168.1.1
IP Subnet Mask	255.255.255.0
MAC Address	90ef60105126150
First DNS Server	192.168.1.1
Second DNS Server	0.0.0.0
Third DNS Server	0.0.0.0

Transceiver Status

Temperature	44.93(Celsius)
Voltage	3.32(Volts)
Bias Current	20.89(mA)
Optical Tx Power	1.57(dBm)
Optical Rx Power	-14.20(dBm)

System Status

System Uptime	0:36:06
CPU Usage	4.98%
Memory Usage	62.28%


Interface Status

Interface	Status	Rate
WAN	Up	1G bps / 2.5G bps
LAN1	Up	1G / Full
LAN2	Down	- / -
LAN3	Down	- / -
LAN4	Down	- / -

Registration Status


Account	Action	Account Status	Associate Service Provider Name	URI
SIP 1	Register	In-Active	Undefined	90ef60105126150@aisfire.ais.co.th
SIP 2	Register	In-Active	Undefined	90ef60105126150@aisfire.ais.co.th

4. จากแถบเมนูด้านซ้าย เลือก **Network** -> **NAT** -> **Port Forwarding**
5. ใส่ **Server Name** และ **Server IP**
6. กด **Add** เพื่อเพิ่มการตั้งค่าใหม่

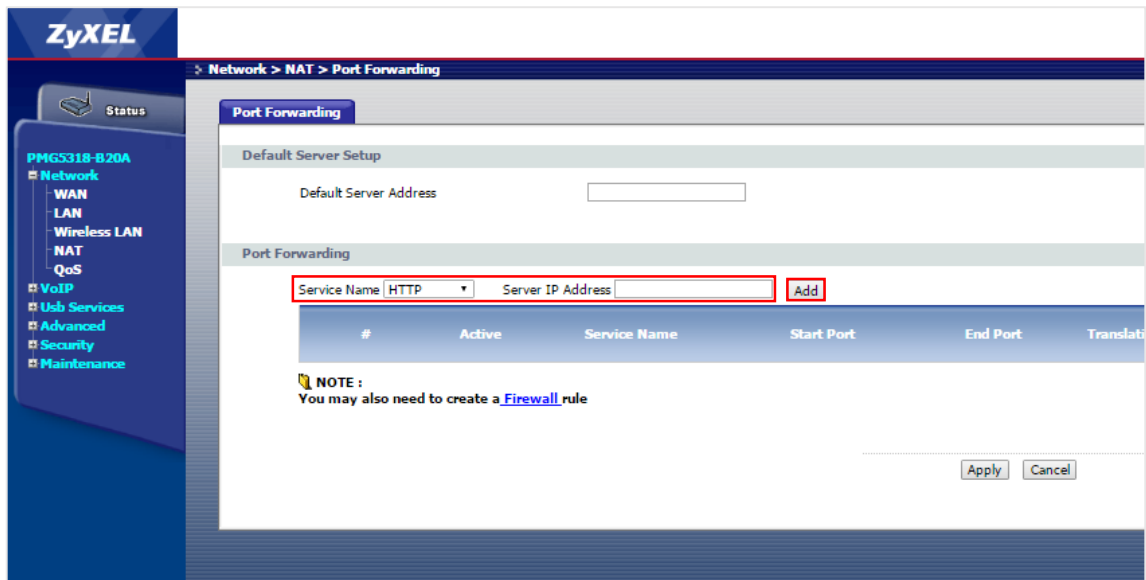

The screenshot shows the ZyXEL web interface for Port Forwarding. The breadcrumb trail is **Network > NAT > Port Forwarding**. The left sidebar shows the navigation menu with **Network** selected. The main content area has a **Port Forwarding** tab. Under **Default Server Setup**, there is a **Default Server Address** field. Below that, the **Port Forwarding** section contains a **Service Name** dropdown (set to **HTTP**), a **Server IP Address** field, and an **Add** button. A table below shows columns for **#**, **Active**, **Service Name**, **Start Port**, **End Port**, and **Translation**. A **NOTE** states: "You may also need to create a [Firewall](#) rule". At the bottom right are **Apply** and **Cancel** buttons.

7. ใส่ข้อมูลให้ครบถ้วน
 - เลือก **Active** เพื่อเปิดการใช้งาน
 - **External Port**: Port ที่จะเข้ามาจากภายนอก
 - **Start Port**: Port ที่จะใช้งานภายใน
8. กด **Apply** เพื่อบันทึกการทำงาน

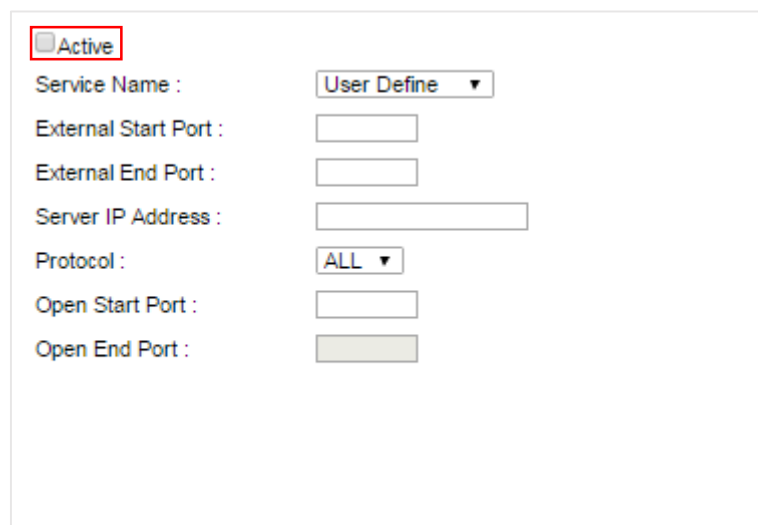

This screenshot shows the detailed configuration for a port forwarding rule. The **Active** checkbox is checked and highlighted with a red box. The configuration fields are as follows:

- Service Name**: User Define (dropdown)
- External Start Port**: [Empty text box]
- External End Port**: [Empty text box]
- Server IP Address**: [Empty text box]
- Protocol**: ALL (dropdown)
- Open Start Port**: [Empty text box]
- Open End Port**: [Empty text box]