


การตั้งค่า Port Forwarding หรือ Virtual Servers

1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**



2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**

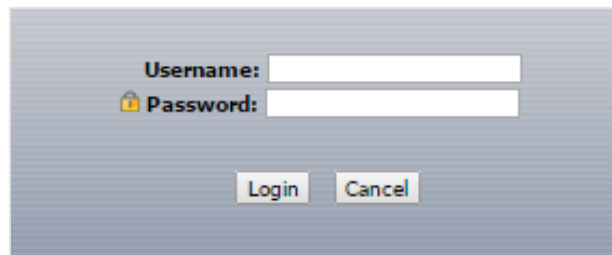


Username:

Password:

Login Cancel

3. หลังจากที Login แล้ว จะเข้าสู่หน้า Setup ซึ่งแสดงข้อมูลต่างๆ

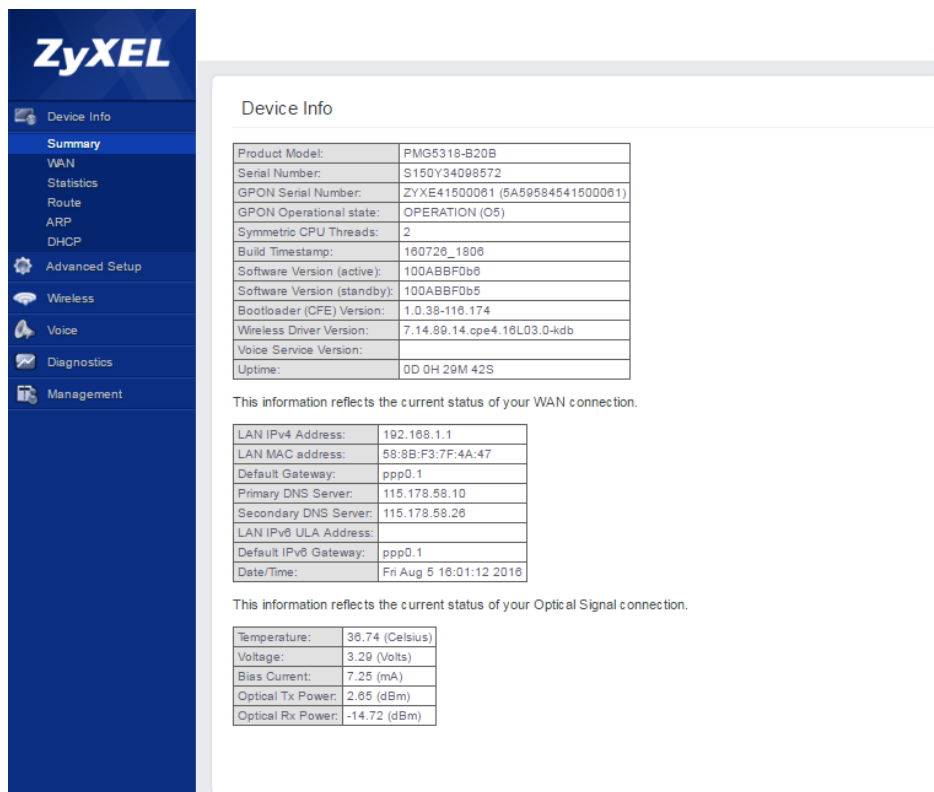

ZyXEL

Device Info

Product Model:	PMG5318-B20B
Serial Number:	S150Y34098572
GPON Serial Number:	ZYXE41500061 (5A59584541500061)
GPON Operational state:	OPERATION (O5)
Symmetric CPU Threads:	2
Build Timestamp:	160726_1806
Software Version (active):	100ABBF0b6
Software Version (standby):	100ABBF0b5
Bootloader (CFE) Version:	1.0.38-116.174
Wireless Driver Version:	7.14.89.14.cpe4.16L03.0-kdb
Voice Service Version:	
Uptime:	0D 0H 29M 42S


This information reflects the current status of your WAN connection.

LAN IPv4 Address:	192.168.1.1
LAN MAC address:	58:8B:F3:7F:4A:47
Default Gateway:	ppp0.1
Primary DNS Server:	115.178.58.10
Secondary DNS Server:	115.178.58.26
LAN IPv6 ULA Address:	
Default IPv6 Gateway:	ppp0.1
Date/Time:	Fri Aug 5 16:01:12 2016

This information reflects the current status of your Optical Signal connection.

Temperature:	36.74 (Celsius)
Voltage:	3.29 (Volts)
Bias Current:	7.25 (mA)
Optical Tx Power:	2.65 (dBm)
Optical Rx Power:	-14.72 (dBm)

4. จากแถบเมนูด้านซ้าย เลือก **Advanced Setup** -> **NAT** -> **Virtual Servers**
5. กด **Add** เพื่อเพิ่มการตั้งค่าใหม่

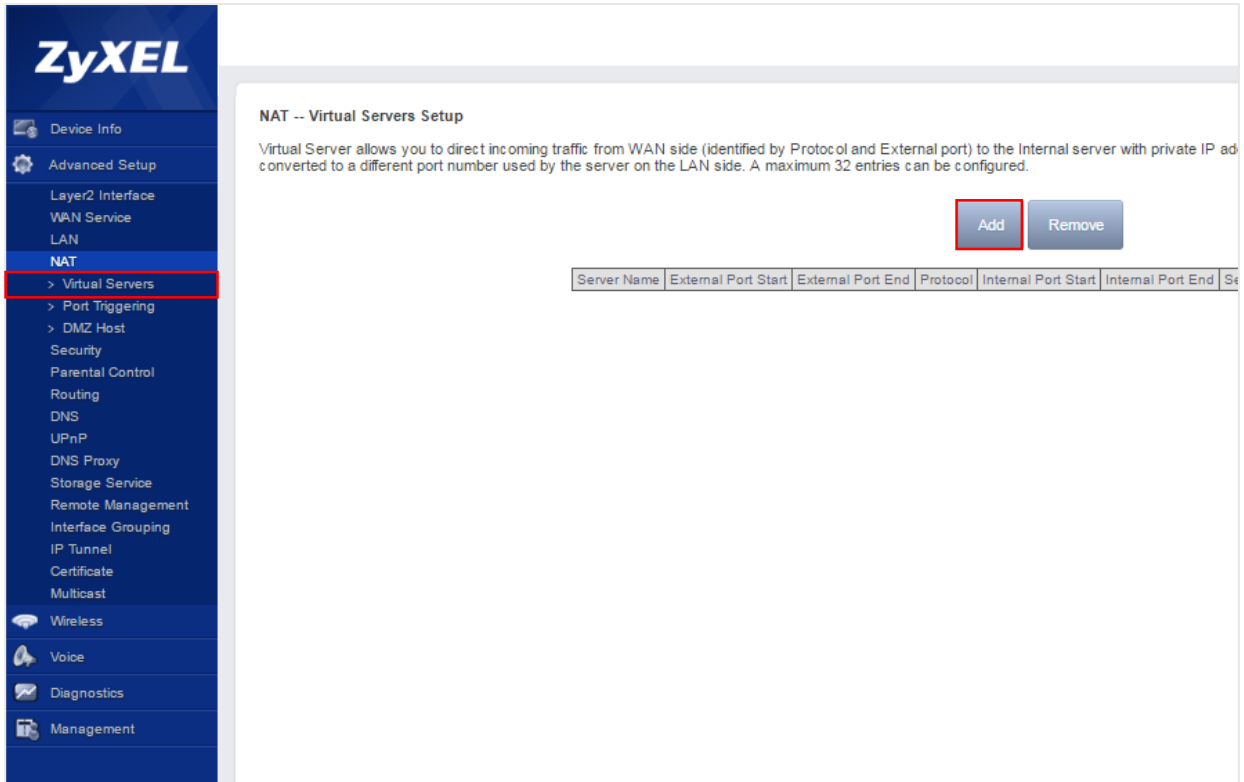

ZyXEL

Device Info

Advanced Setup

Layer2 Interface

WAN Service

LAN

NAT

> Virtual Servers

> Port Triggering

> DMZ Host

Security

Parental Control

Routing

DNS

UPnP

DNS Proxy

Storage Service

Remote Management

Interface Grouping

IP Tunnel

Certificate

Multicast

Wireless

Voice

Diagnostics

Management

NAT -- Virtual Servers Setup

Virtual Server allows you to direct incoming traffic from WAN side (identified by Protocol and External port) to the Internal server with private IP address converted to a different port number used by the server on the LAN side. A maximum 32 entries can be configured.

Add **Remove**

Server Name	External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End	Server IP

6. ใส่ข้อมูลให้ครบถ้วน
 - User Interface: เลือก WAN ที่ใช้งาน
 - External Port: Port ที่จะเข้ามาจากภายนอก
 - Internal Port: Port ที่จะใช้งานภายใน
7. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

Use Interface: **ipoe_veip0.20/veip0.2**

Service Name:

☒ Select a Service: **Select One**

☐ Custom Service:

Server IP Address:

Apply/Save

External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End
		TCP		
		TCP		
		TCP		