


การตั้งค่า Port Forwarding หรือ Virtual Servers


1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**




2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**

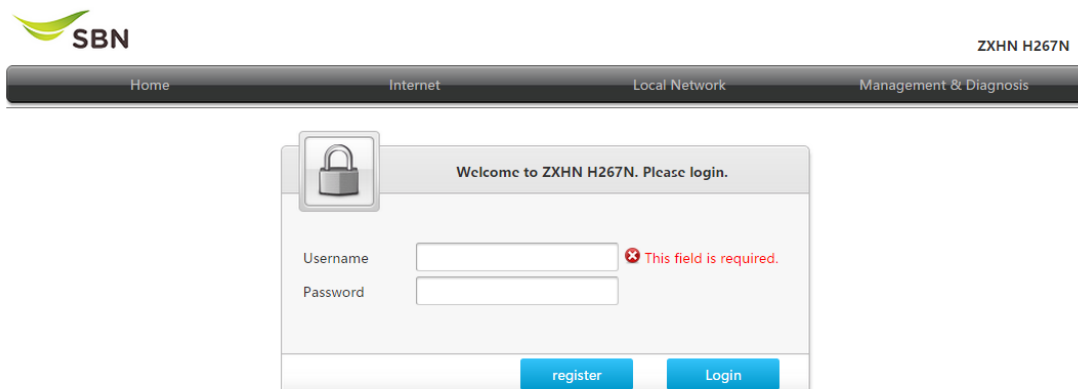

3. เข้าสู่หน้าจอ setup

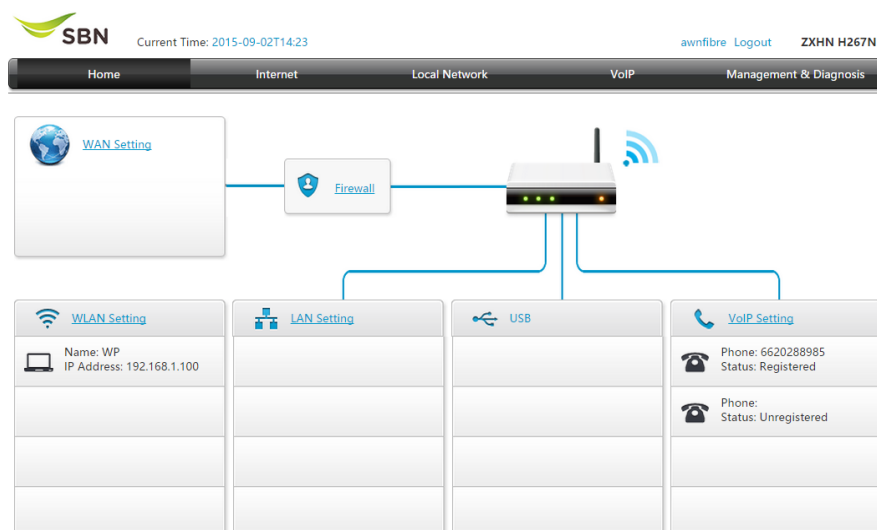

4. จากแถบเมนูด้านบน เลือก **Internet**
5. จากแถบเมนูย่อยด้านซ้าย เลือก **Security -> Port Forwarding**
6. เลือก **Port Forwarding**

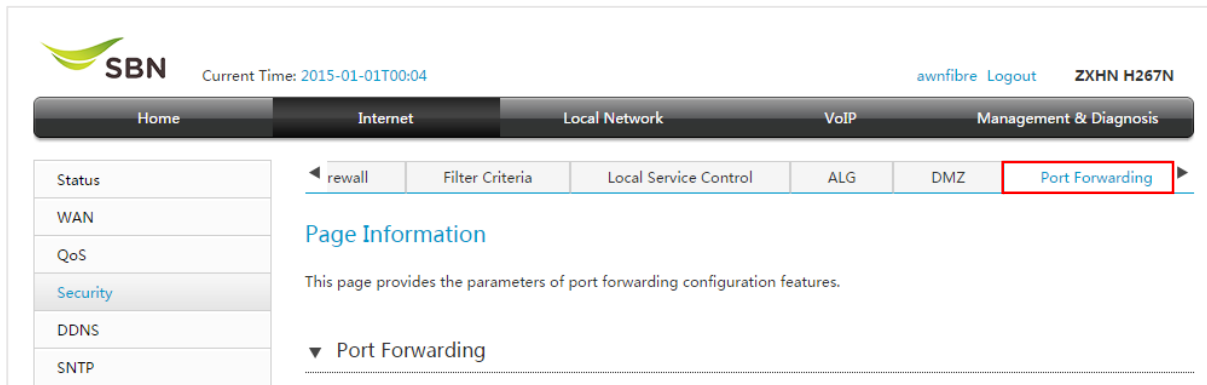


The screenshot shows the SBN web interface. At the top, there's a header with the SBN logo, current time (2015-01-01T00:04), and user information (awnfibre, Logout, ZXHN H267N). Below the header is a navigation bar with tabs: Home, Internet, Local Network, VoIP, and Management & Diagnosis. Under the Internet tab, there's a sub-menu with: Firewall, Filter Criteria, Local Service Control, ALG, DMZ, and Port Forwarding (highlighted with a red box). On the left side, there's a sidebar menu with: Status, WAN, QoS, Security (highlighted), DDNS, and SNTP. The main content area shows the 'Page Information' for Port Forwarding, stating: 'This page provides the parameters of port forwarding configuration features.' Below this, there's a section titled 'Port Forwarding' with a dropdown arrow.

7. ใส่ข้อมูลให้ครบถ้วน
8. จากนั้นกด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

▼ Port Forwarding

[What should be noticed when configuring port forwarding?](#)

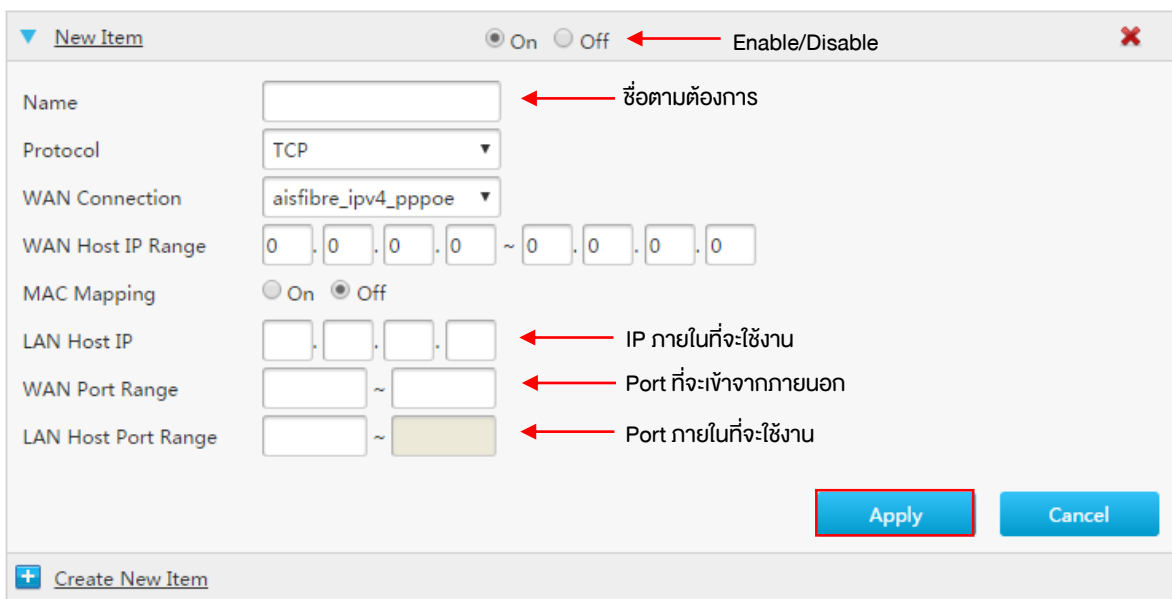

The screenshot shows the 'New Item' configuration window for Port Forwarding. It has a title bar with 'New Item', 'On' (selected) and 'Off' radio buttons, and a close button. The form contains the following fields and annotations:

- Name:** A text input field with a red arrow pointing to it and the text 'ชื่อตามต้องการ' (Name as required).
- Protocol:** A dropdown menu showing 'TCP'.
- WAN Connection:** A dropdown menu showing 'aisfibre_ipv4_pppoe'.
- WAN Host IP Range:** Two IP address input fields separated by a tilde (~).
- MAC Mapping:** Radio buttons for 'On' and 'Off'.
- LAN Host IP:** An IP address input field with a red arrow pointing to it and the text 'IP ภายในที่จะใช้งาน' (Internal IP to be used).
- WAN Port Range:** Two port number input fields separated by a tilde (~) with a red arrow pointing to it and the text 'Port ที่จะเข้าจากภายนอก' (Port to be entered from outside).
- LAN Host Port Range:** Two port number input fields separated by a tilde (~) with a red arrow pointing to it and the text 'Port ภายในที่จะใช้งาน' (Internal port to be used).

At the bottom right, there are 'Apply' and 'Cancel' buttons. At the bottom left, there is a '+ Create New Item' link.