


วิธีดูค่า Network Status


1. เปิด Browser พิมพ์ **192.168.1.1** ในช่อง Address แล้วกด **Enter**



2. ใส่ Username: **admin** และ Password: **aisadmin** แล้วกด **Login**

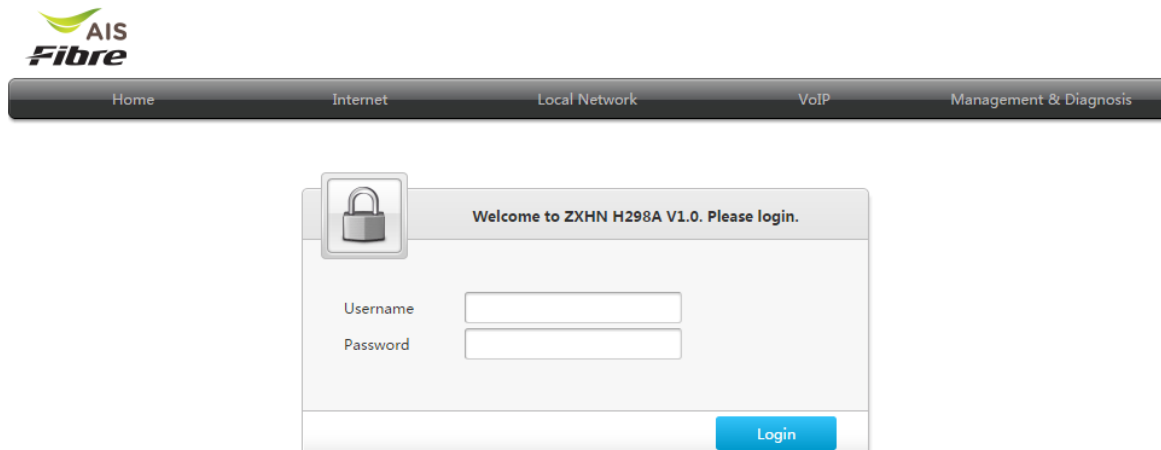

3. เข้าสู่หน้าจอ setup

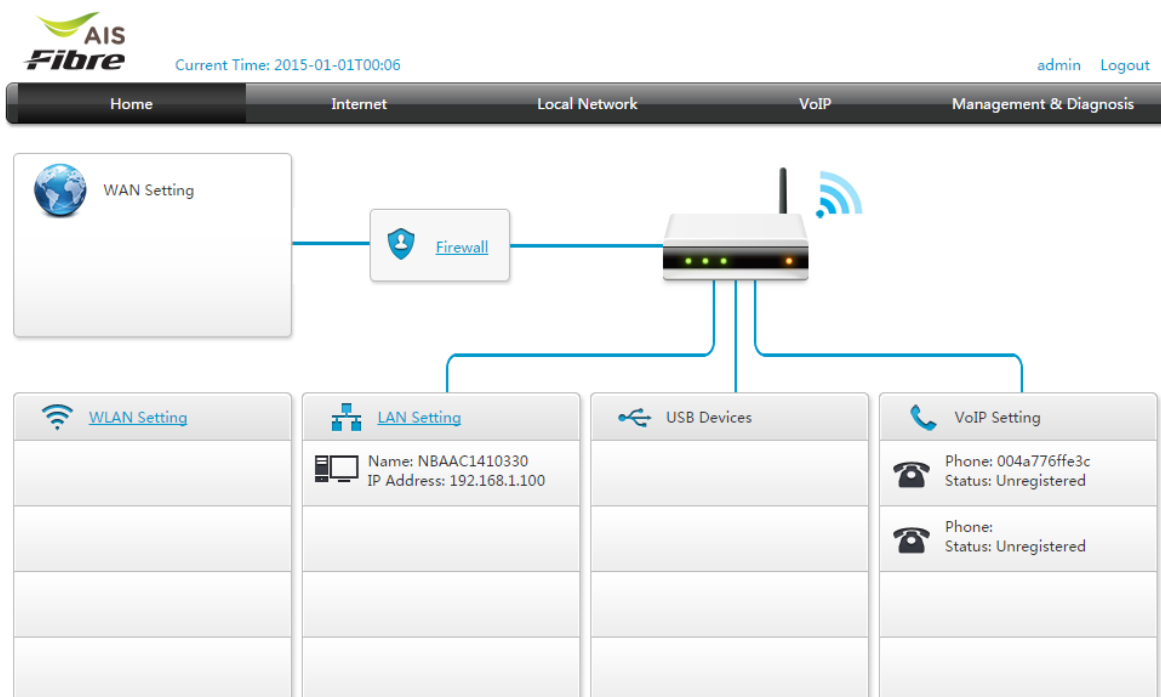

4. จากแถบเมนูหลักด้านบนเลือก Internet -> Status -> Ethernet
5. หน้าต่างจะแสดงข้อมูลการเชื่อมต่อ Internet ดังภาพด้านล่าง


Current Time: 2015-01-01T00:08
admin Logout

Home
Internet
Local Network
VoIP
Management & Diagnosis

Status

Clear Control

QoS

Security

Parental Controls

DDNS

SNTP

Dynamic Routing

Multicast

Ethernet

3G

DSLite

6RD

L2TP

Page Information

This page shows the status of Ethernet.

▼ Ethernet Interface Information

Interface Name	WAN
MAC Address	00:4a:77:6f:fe:3c
Status	No Link
Packets Received/Bytes Received	0/0
Packets Sent/Bytes Sent	0/0

[Refresh](#)

▼ Ethernet Connection Status

Connection Name	aisfibre_ipv6_ipv4_pppoe
Type	PPPoE
IP Version	IPv4/v6
NAT	On
IP Address	0.0.0.0/0.0.0.0
DNS	0.0.0.0/0.0.0.0/0.0.0.0
IPv4 Connection Status	Disconnected
IPv4 Online Duration	0 h 0 min 0 s
Disconnect Reason	No Carrier
LLA	::
Delegating Prefix	::/0
GUA	::
DNS	::/::/::
IPv6 Connection Status	Disconnected
IPv6 Online Duration	0 h 0 min 0 s
WAN MAC	00:4a:77:6f:fe:3c

Connection Name	ETH_2_1_1_INTERNET_B_IP
Type	Bridge Connection