

วิธีดูค่า Status ที่บ่งบอกถึง Performance ของ Internet


1. เปิด Browser พิมพ์ 192.168.1.1 ในช่อง Address แล้วกด Enter



2. ใส่ Username: admin และ Password: aisadmin แล้วกด Login



3. จากแถบเมนูด้านบน เลือก **Status**
4. จากแถบเมนูย่อยด้านซ้าย เลือก **Optical Information**

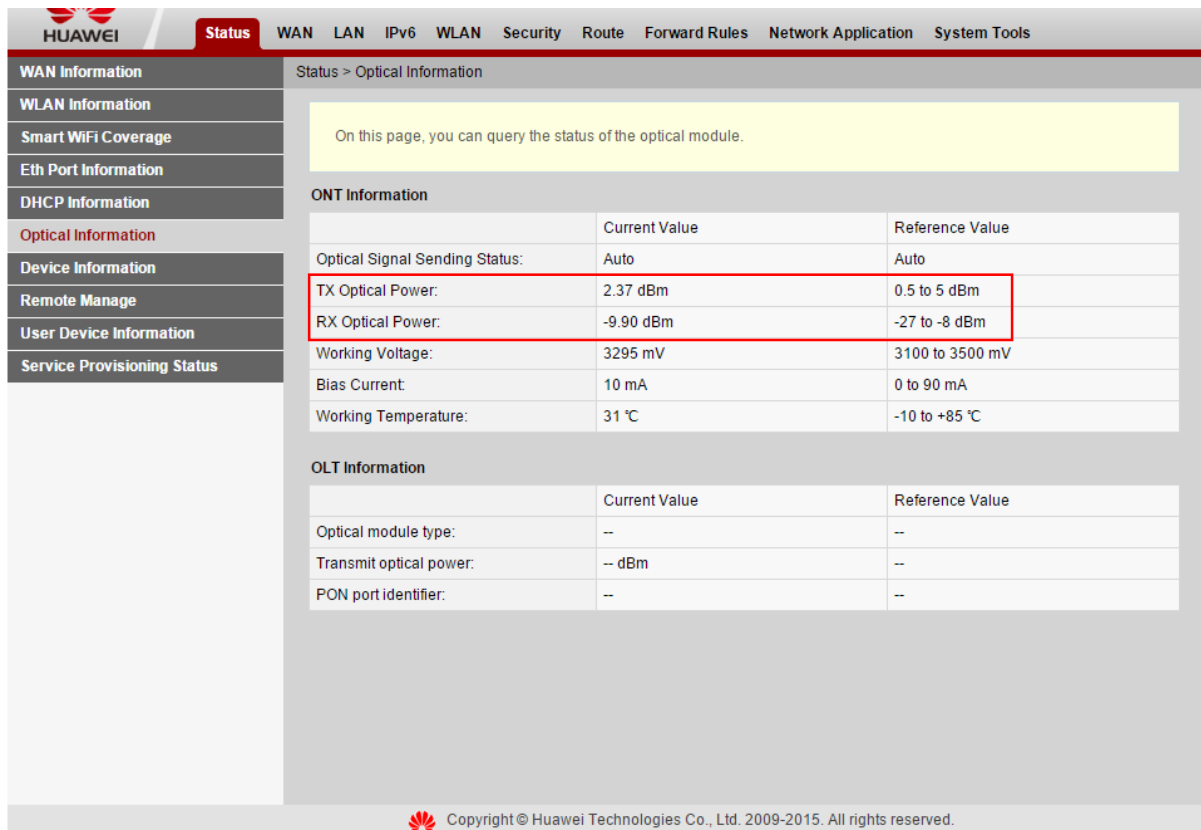

The screenshot shows the Huawei Optical Information page. The left sidebar contains a menu with the following items: WAN Information, WLAN Information, Smart WiFi Coverage, Eth Port Information, DHCP Information, Optical Information (highlighted in red), Device Information, Remote Manage, User Device Information, and Service Provisioning Status. The main content area is titled 'Status > Optical Information' and contains a yellow box with the text: 'On this page, you can query the status of the optical module.' Below this, there are two tables: 'ONT Information' and 'OLT Information'.

	Current Value	Reference Value
Optical Signal Sending Status:	Auto	Auto
TX Optical Power:	2.37 dBm	0.5 to 5 dBm
RX Optical Power:	-9.90 dBm	-27 to -8 dBm
Working Voltage:	3295 mV	3100 to 3500 mV
Bias Current:	10 mA	0 to 90 mA
Working Temperature:	31 °C	-10 to +85 °C

	Current Value	Reference Value
Optical module type:	--	--
Transmit optical power:	-- dBm	--
PON port identifier:	--	--

Copyright © Huawei Technologies Co., Ltd. 2009-2015. All rights reserved.