

การตั้งค่า DHCP และการจัดการ IP Address

1. เปิด Browser พิมพ์ **192.168.1.1** แล้วกด Enter



2. ใส่ Username: **admin** และ Password: **aisadmin** จากนั้นกด Login




Enter the username and password for FiberHome router.


Username:

Password:

3. หลังจาก Login สำเร็จ จะเข้าสู่หน้าจอ ดังภาพด้านล่าง

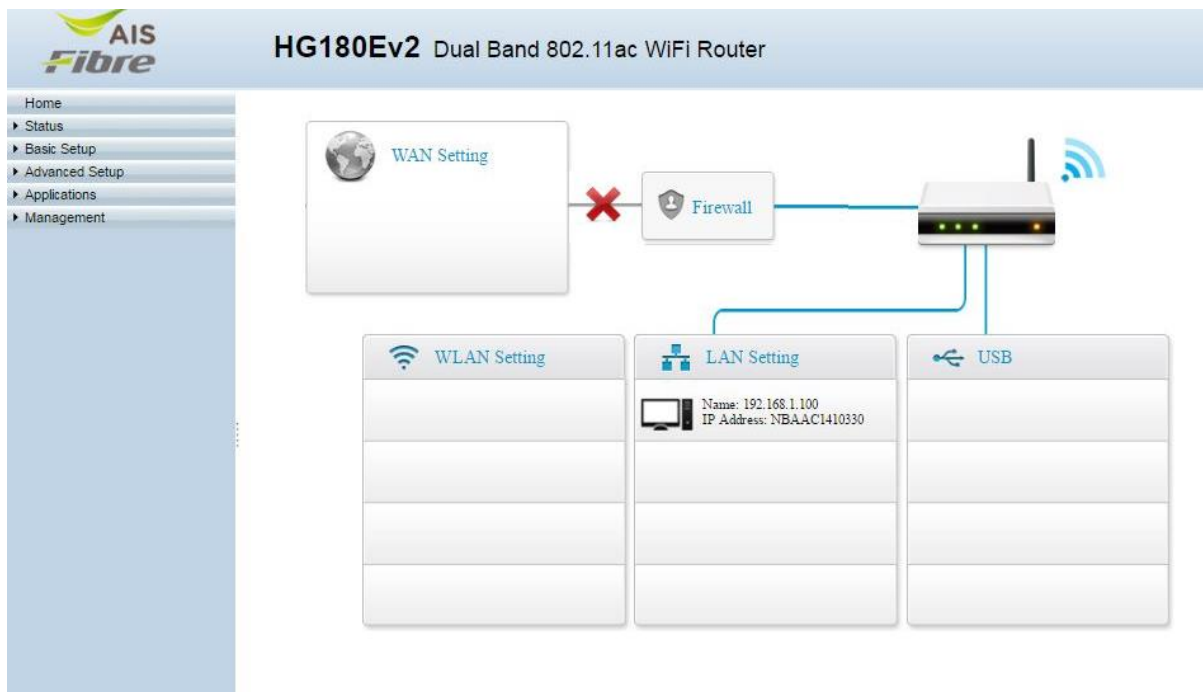

4. เลือก **Basic Setup** -> **LAN** -> **IPv4 Configuration**
5. ในช่อง **IP Address** สามารถเปลี่ยนแปลงหมายเลข IP ได้ตามต้องการ
6. สามารถกำหนดช่วงของ IP ที่ใช้ในการแจกจ่ายได้
7. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

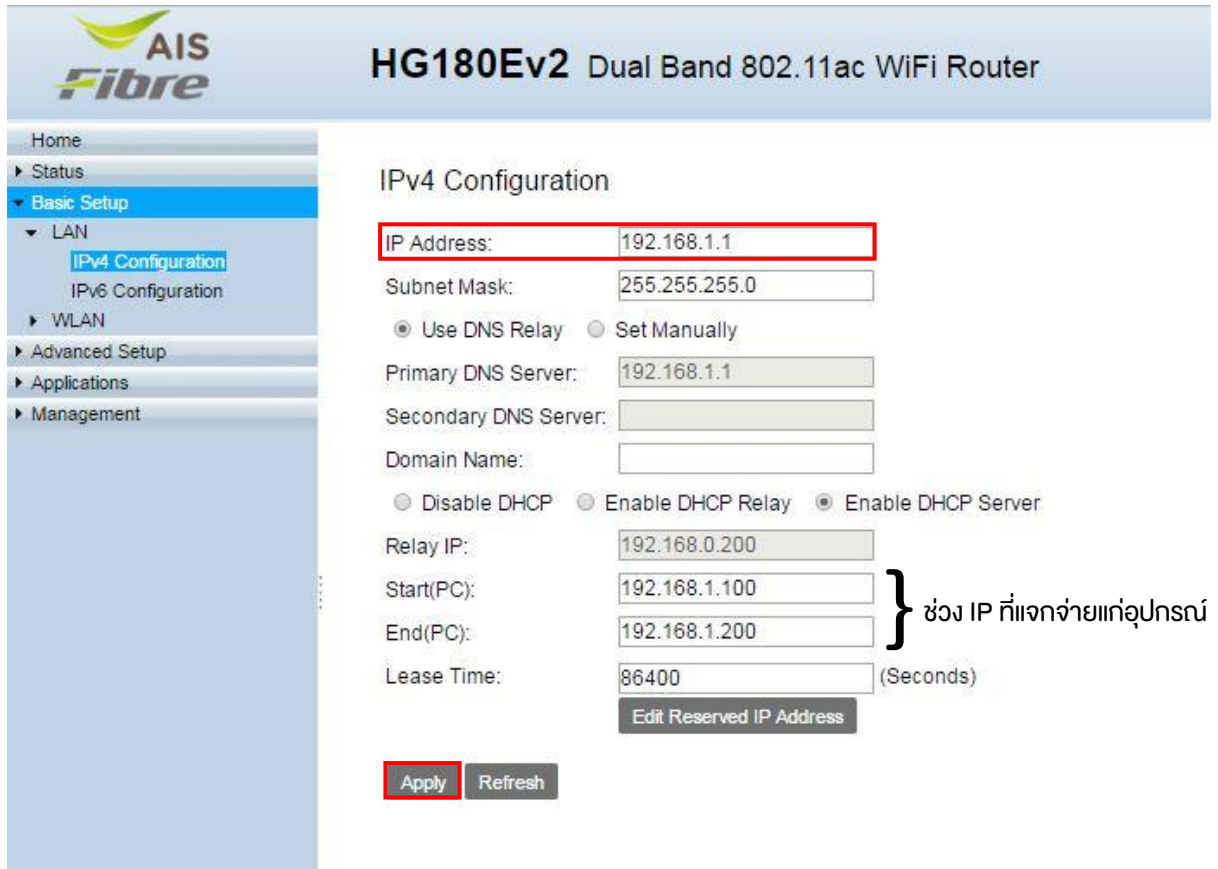

The screenshot shows the web interface of an AIS Fibre HG180Ev2 Dual Band 802.11ac WiFi Router. The left sidebar contains a navigation menu with the following items: Home, Status, Basic Setup (selected), LAN (expanded), IPv4 Configuration (selected), IPv6 Configuration, WLAN, Advanced Setup, Applications, and Management. The main content area is titled "IPv4 Configuration" and contains the following fields and options:

- IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- ☒ Use DNS Relay ☐ Set Manually
- Primary DNS Server: 192.168.1.1
- Secondary DNS Server: (empty)
- Domain Name: (empty)
- ☐ Disable DHCP ☐ Enable DHCP Relay ☒ Enable DHCP Server
- Relay IP: 192.168.0.200
- Start(PC): 192.168.1.100
- End(PC): 192.168.1.200
- Lease Time: 86400 (Seconds)
- Edit Reserved IP Address (button)
- Apply (button) Refresh (button)

A red box highlights the IP Address field. A bracket on the right side of the Start(PC) and End(PC) fields points to the text "ช่วง IP ที่แจกจ่ายแก่อุปกรณ์" (IP range distributed to devices).