

วิธีการ Restore to Default

ผู้ใช้งานสามารถทำการ Restore to Default ได้ 2 วิธี โดยทั้งสองวิธีจะให้ผลลัพธ์การทำงานแบบเดียวกัน

Hardware

1. กดปุ่ม Reset ที่หลังอุปกรณ์ ค้างไว้ประมาณ 10 วินาที แล้วปล่อยออก
2. อุปกรณ์จะ Reboot โดยอัตโนมัติ

Software

1. เปิด Browser พิมพ์ **192.168.1.1** แล้วกด Enter



2. ใส่ Username: **admin** และ Password: **aisadmin** จากนั้นกด Login




Enter the username and password for FiberHome router.


Username:

Password:

3. หลังจาก Login สำเร็จ จะเข้าสู่หน้าจอตั้งค่าด้านล่าง

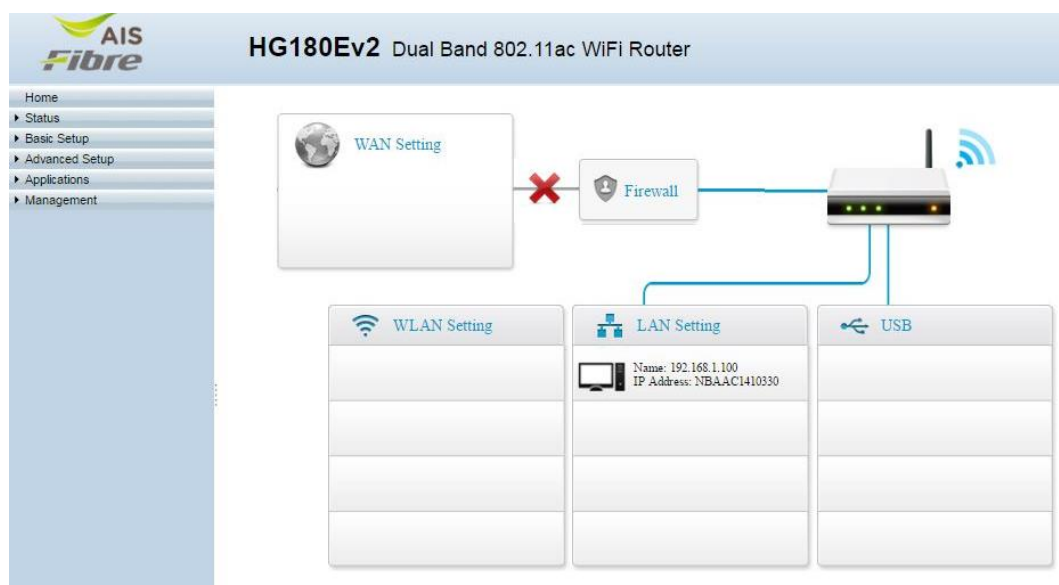

4. จากแถบเมนูด้านซ้าย เลือก **Management -> Settings -> Restore Default**
5. กด **Restore Default Settings**
6. อุปกรณ์จะใช้เวลา Restore to default ประมาณ 2-3 นาที จึงจะพร้อมใช้งานอีกครั้ง

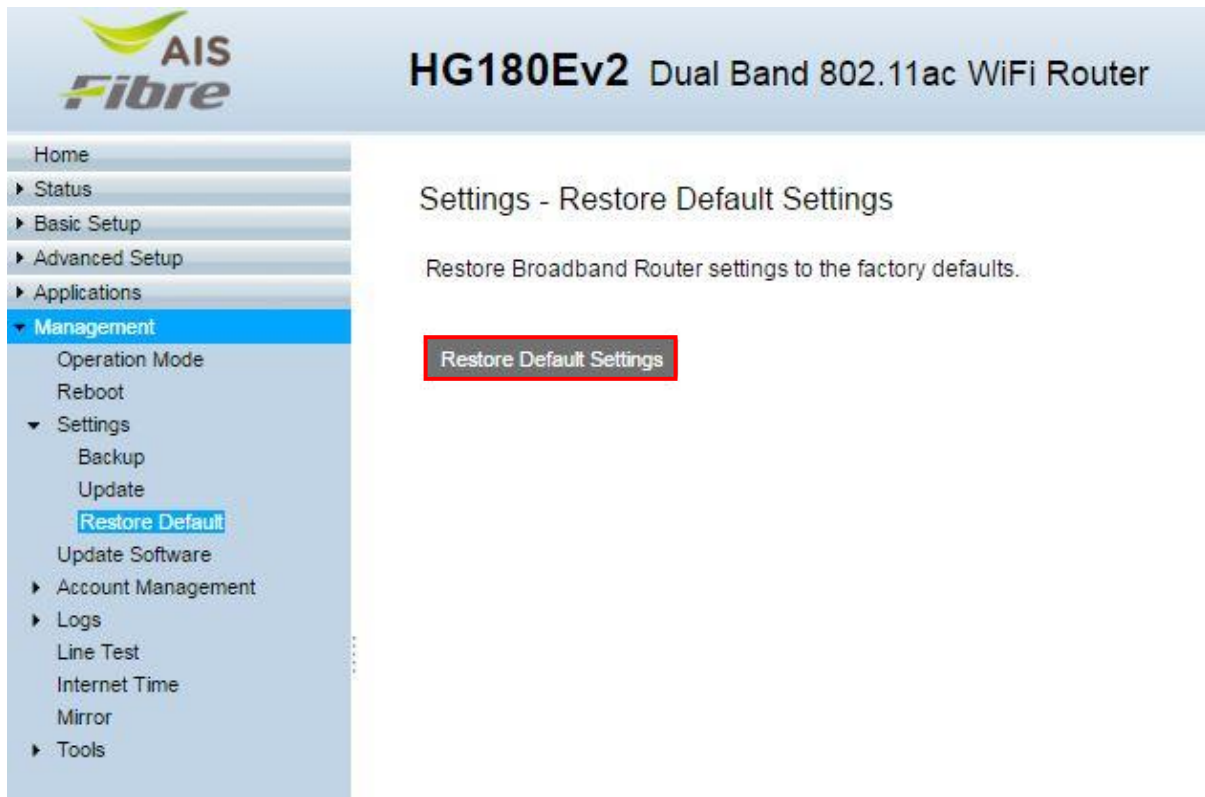

AIS Fibre **HG180Ev2** Dual Band 802.11ac WiFi Router

Home

- ▶ Status
- ▶ Basic Setup
- ▶ Advanced Setup
- ▶ Applications
- ▼ **Management**
 - Operation Mode
 - Reboot
 - ▼ Settings
 - Backup
 - Update
 - Restore Default**
 - Update Software
 - ▶ Account Management
 - ▶ Logs
 - Line Test
 - Internet Time
 - Mirror
 - ▶ Tools

Settings - Restore Default Settings

Restore Broadband Router settings to the factory defaults.

Restore Default Settings