

การเปลี่ยน Channel ของ Wireless


1. เปิด Browser พิมพ์ 192.168.1.1 ในช่อง Address แล้วกด Enter



2. ใส่ Username: admin และ Password: aisadmin แล้วกด Login



3. จากแถบเมนูด้านบน เลือก **WLAN**
4. จากแถบเมนูย่อยด้านซ้าย เลือก **WLAN Advanced Configuration**
5. ที่ช่อง **Channel** เลือกเปลี่ยน Channel ได้ตามต้องการ
6. กด **Apply** เพื่อบันทึกการเปลี่ยนแปลง

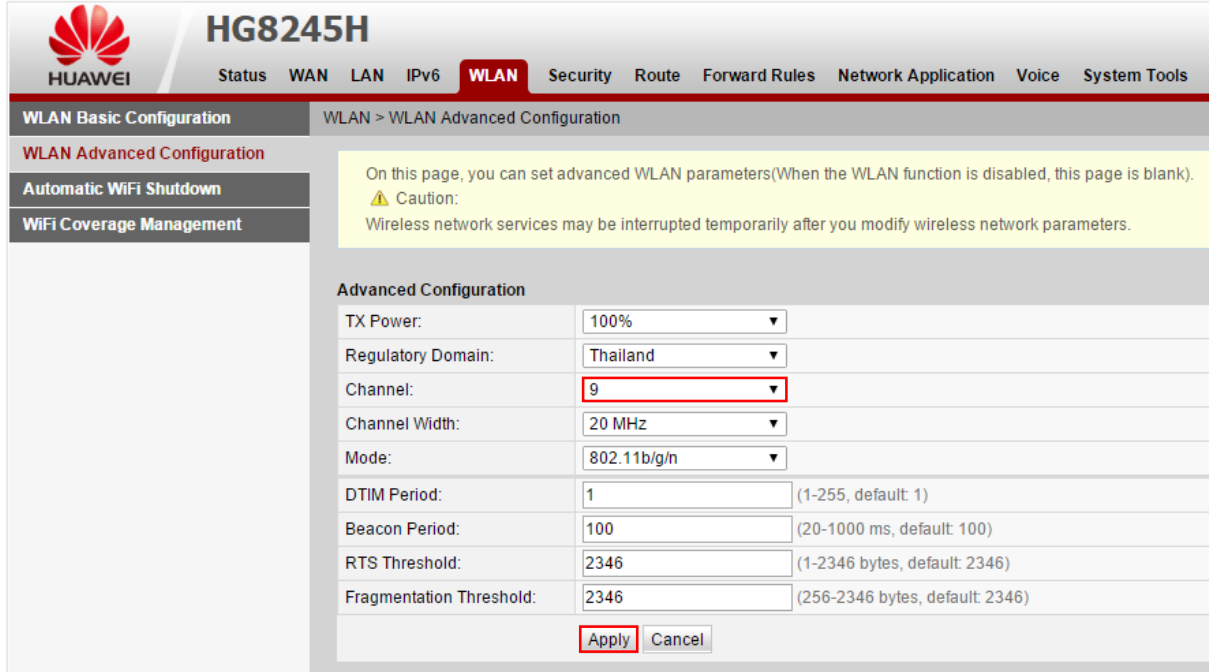

HUAWEI **HG8245H**

Status WAN LAN IPv6 **WLAN** Security Route Forward Rules Network Application Voice System Tools

WLAN Basic Configuration WLAN > WLAN Advanced Configuration

WLAN Advanced Configuration

Automatic WiFi Shutdown

WiFi Coverage Management

On this page, you can set advanced WLAN parameters(When the WLAN function is disabled, this page is blank).
⚠ Caution:
Wireless network services may be interrupted temporarily after you modify wireless network parameters.

Advanced Configuration

TX Power:	100%	
Regulatory Domain:	Thailand	
Channel:	9	
Channel Width:	20 MHz	
Mode:	802.11b/g/n	
DTIM Period:	1	(1-255, default: 1)
Beacon Period:	100	(20-1000 ms, default: 100)
RTS Threshold:	2346	(1-2346 bytes, default: 2346)
Fragmentation Threshold:	2346	(256-2346 bytes, default: 2346)

Apply Cancel