

การตั้งค่า DHCP และการจัดการ IP Address


1. เปิด Browser พิมพ์ **192.168.1.1** แล้วกด Enter




2. ใส่ Username: **admin** และ Password: **aisadmin** จากนั้นกด Login



3. เลือก LAN -> LAN Host Configuration
4. ในช่อง IP Address คือ IP ของอุปกรณ์ สามารถเปลี่ยนแปลงได้ตามต้องการ
5. กด Apply เพื่อยืนยันการเปลี่ยนแปลง

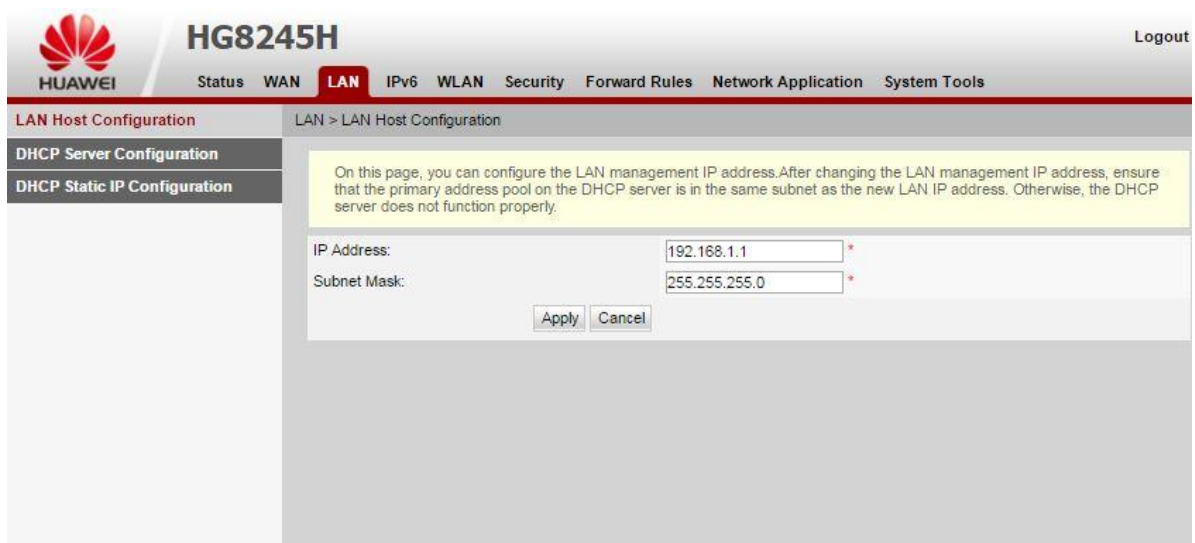

6. เลือก DHCP Server Configuration
7. ผู้ใช้งานสามารถกำหนดช่วง IP ที่แจกจ่ายให้กับอุปกรณ์ที่เชื่อมต่อกับ Router ได้ ในช่องสีแดง
8. กด Apply เพื่อบันทึกการเปลี่ยนแปลง

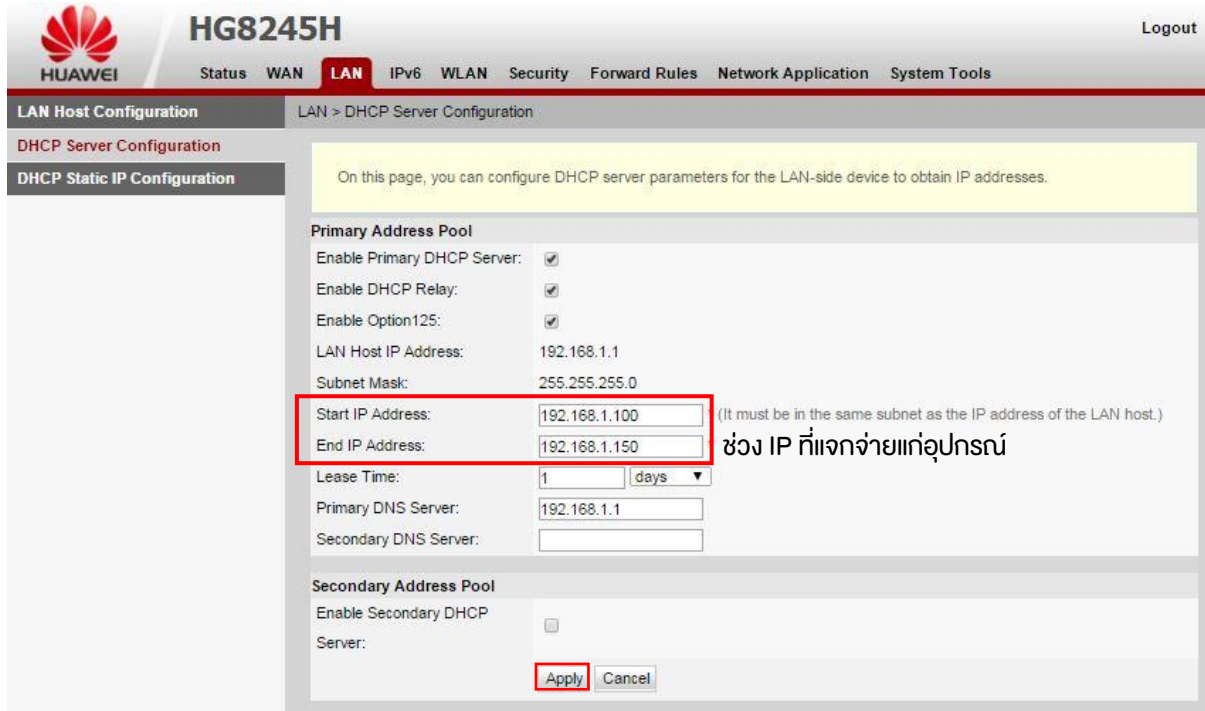

HG8245H Logout

Status WAN **LAN** IPv6 WLAN Security Forward Rules Network Application System Tools

LAN Host Configuration LAN > DHCP Server Configuration

DHCP Server Configuration

DHCP Static IP Configuration

On this page, you can configure DHCP server parameters for the LAN-side device to obtain IP addresses.

Primary Address Pool

Enable Primary DHCP Server: ☒

Enable DHCP Relay: ☒

Enable Option125: ☒

LAN Host IP Address: 192.168.1.1

Subnet Mask: 255.255.255.0

Start IP Address: 192.168.1.100 (It must be in the same subnet as the IP address of the LAN host.)

End IP Address: 192.168.1.150 ช่วง IP ที่แจกจ่ายแก่อุปกรณ์

Lease Time: 1 days

Primary DNS Server: 192.168.1.1

Secondary DNS Server:

Secondary Address Pool

Enable Secondary DHCP Server: ☐

Server:

Apply Cancel