


การเปลี่ยน Channel ของ Wireless

1. เปิด Browser พิมพ์ 192.168.1.1 ในช่อง Address แล้วกด Enter



2. ใส่ Username: admin และ Password: aisadmin แล้วกด Login

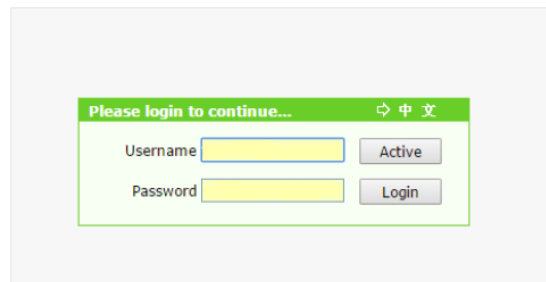


Please login to continue... 中文

Username Active

Password Login

3. เข้าสู่หน้าจอ setup

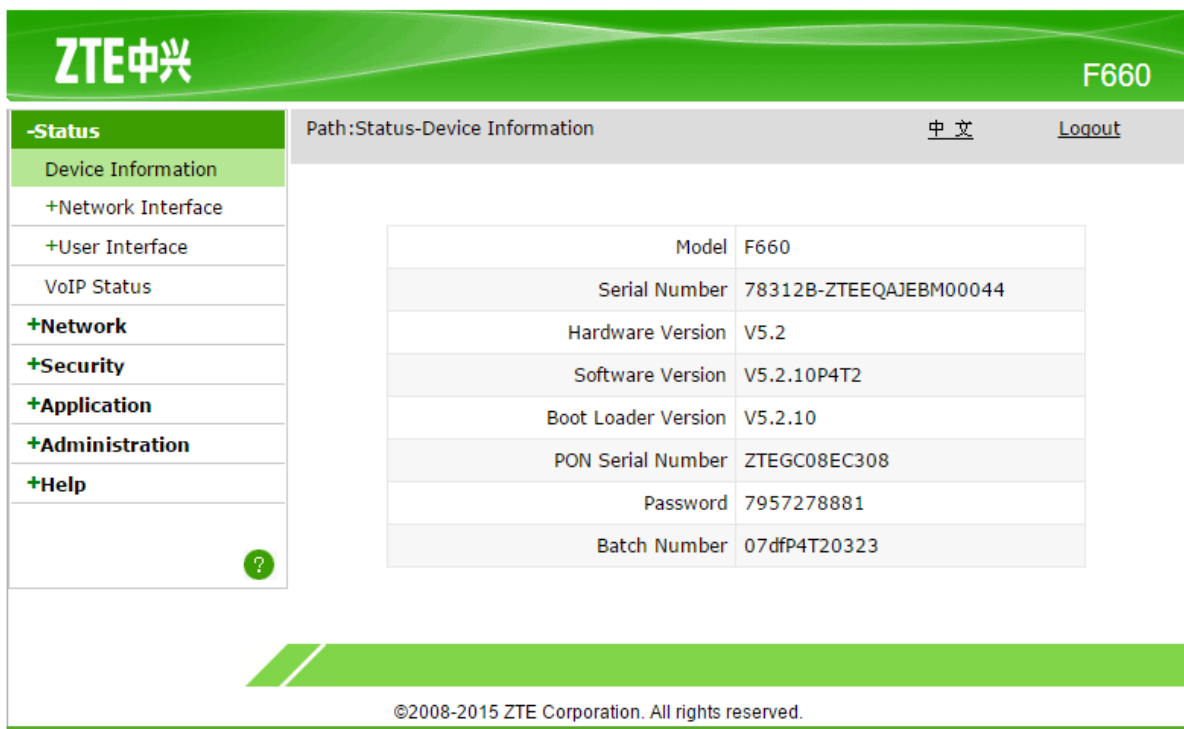

ZTE中兴 F660

Path: Status-Device Information 中文 Logout

Model	F660
Serial Number	78312B-ZTEEQAJEBM00044
Hardware Version	V5.2
Software Version	V5.2.10P4T2
Boot Loader Version	V5.2.10
PON Serial Number	ZTEGC08EC308
Password	7957278881
Batch Number	07dfP4T20323

©2008-2015 ZTE Corporation. All rights reserved.

4. จากแถบเมนูด้านซ้าย เลือก **Network -> WLAN -> Basic**
5. ในช่อง **Channel** เลือกช่องสัญญาณที่ต้องการใช้งาน
6. กด **Submit** เพื่อบันทึกการเปลี่ยนแปลง

ZTE中兴
F660

Path: Network-WLAN-Basic
中文
Logout

+Status

-Network

+WAN

-WLAN

Basic

SSID Settings

Security

Access Control List

Associated Devices

WDS

WMM

WiFi Restrictions

WPS

+LAN

+PON

+Routing(IPv4)

+Routing(IPv6)

Port Locating

+Security

+Application

+Administration

+Help

?

Tip: Wireless RF mode from disabled to scheduled take a minute or so, please refresh.

Wireless RF Mode

Enabled ▼

Enable Isolation

☐

Mode

Mixed(802.11b+802.11g+802.11 ▼

Country/Region

Thailand ▼

Band Width

20MHz ▼

Channel

9 ▼

SIG Enable

☐

Beacon Interval

100 ms

Transmitting Power

100% ▼

QoS Type

SSID ▼

RTS Threshold

2347

DTIM Interval

1

Submit

Cancel

©2008-2015 ZTE Corporation. All rights reserved.